

Grupo INL

INL®

Grupo INL

PosiTector® *SST* Soluble Salt Tester

Measures the concentration of
soluble salts on metal surfaces



Innovative PosiPatch™...

- No adhesive residue
- Automatic air removal
- No sharps, no needles!

For use with
all Bresle patch
types including
PosiPatch

DeFelsko®
The Measure of Quality

www.grupoinl.com
info@grupoinl.com

 **Bluetooth®**  WiFi

 Available on the
App Store



PosiTector[®] SST Soluble Salt Tester

All Gages Feature...

Simple

- Conductivity probe specifically designed for ISO 8502-6,9
- Displays test duration, sample temperature, conductivity ($\mu\text{S}/\text{cm}$) and surface density (mg/m^2 or $\mu\text{g}/\text{cm}^2$)
- Onscreen interface guides users through the Bresle test method
- Automatic storage of a background (blank) measurement — handy when performing multiple tests

Durable

- Solvent, acid, oil, water and dust resistant—weatherproof
- Shock-absorbing, protective rubber holster with belt clip
- Two year warranty on gage body AND probe

Accurate

- Long Form Certificate of Calibration showing traceability to NIST included
- Includes certified conductivity standard (calibration solution) to verify probe accuracy. Certificate included.
- Automatic temperature normalization and sample temperature reporting
- Conforms to national and international standards including ISO, NACE, SSPC, IMO and US Navy

Versatile

- PosiTector body accepts all PosiTector SST, 6000, 200, RTR, SPG, DPM, SHD and UTG probes easily converting from a soluble salt tester to a coating thickness gage, surface profile gage, dew point meter, Shore hardness durometer or ultrasonic wall thickness gage
- Ideal for determination of water-soluble contaminants in non-metallic blast media
- A selection of kits include everything needed to retrieve and analyze the concentration of soluble salts on surfaces
- Adjustable for various patch volumes
- Selectable display languages
- High contrast reversible color LCD with backlit display
- Uses alkaline or rechargeable batteries (built-in charger)

Powerful

- Tracks test duration in accordance with ISO 8502-6
- Screen Capture—save screen images for record keeping and review
- USB port for fast, simple connection to a PC and to supply continuous power
- Every stored measurement is date, time and temperature stamped
- Software updates via internet keep your gage current
- PosiSoft USB Drive—stored readings and graphs can be accessed using universal PC/Mac web browsers or file explorers. No software required.
- Includes PosiSoft suite of software for viewing and reporting data

Select Standard or Advanced Features

Standard Models

Includes ALL features as shown above plus...

- Storage of 250 readings—stored readings can be viewed or downloaded

Advanced Models

Includes ALL features as shown above plus...

- Storage of 100,000 readings in up to 1,000 batches
- Batch annotation—add notes and change batch names with onscreen QWERTY keyboard
- WiFi technology wirelessly synchronizes with PosiSoft.net and downloads software updates
- Data transfer via USB to a PC or via  Bluetooth[®] Wireless Technology to a mobile device, PC or printer
- Store thickness, profile, environmental, wall thickness, hardness and salt contamination measurements in individual batches



Easy 1-2-3 Bresle Test




Reference...
Fill the syringe with DI water. Take background reading.



Sample...
Inject water into patch. Start timer.



Record...
Withdraw, inject into PosiTector SST.

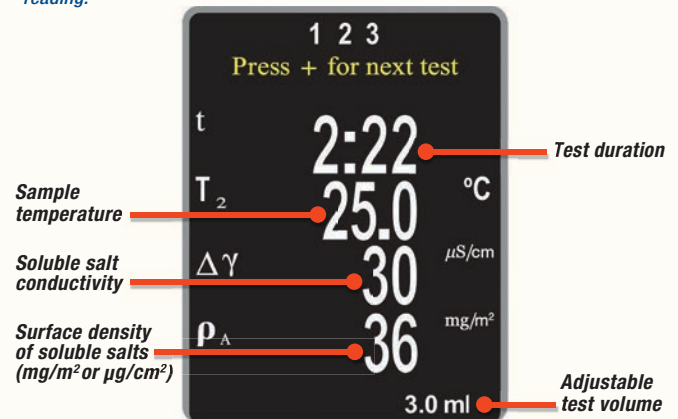

PosiSoft[®]
FREE SOLUTIONS
for viewing,
analyzing and
reporting data:



US812 Bridge Approach

ABC
COMPANY

Salt Test US812-SB

Created: 2016-09-15 15:56:49
PosiTector Body S/N: 784293
Probe Type: PosiTector SST
Probe S/N: 285817



Summary

	#	x	σ	↓	↑
Conductivity Δγ ($\mu\text{S}/\text{cm}$)	13	31.8	3.1	24	35
Surface Density pA (mg/m^2)	13	38.3	3.8	29	42

Readings

#	γ	γ1	Δγ	pA	Duration	T	T	Volume	Time
	($\mu\text{S}/\text{cm}$)			(mg/m^2)		($^{\circ}\text{C}$)	($^{\circ}\text{C}$)	(ml)	
1	2	26	24	29	2:20	26.4	26.4	3.0	2016-09-15 16:03:30
2	0	34	34	41	2:17	26.6	26.8	3.0	16:06:48
3	0	35	35	42	2:13	26.8	26.3	3.0	16:09:16
4	1	36	35	42	2:10	26.3	25.7	3.0	16:11:48
5	5	34	29	35	2:08	25.6	25.3	3.0	16:14:52
6	0	33	33	40	2:12	25.3	25.4	3.0	16:17:42
7	3	32	29	35	2:14	25.6	25.8	3.0	16:20:40
8	3	33	30	36	2:15	25.6	26.3	3.0	16:23:24
9	0	34	34	41	2:13	26.3	26.6	3.0	16:26:03
10	1	34	33	40	2:13	26.7	27.6	3.0	16:28:35
11	1	34	33	40	2:18	26.7	27.9	3.0	16:31:10
12	1	34	33	40	2:30	26.7	27.8	3.0	16:34:05
13	1	32	31	37	2:10	26.7	27.3	3.0	16:36:47

PosiTector[®] *SST* Bresle Method Patch Options



PosiPatch

Flexible patch with magnetic ring

- For measuring salt contamination in accordance with ISO 8502-6,9
- Magnetic ring attaches to steel with no residue to clean – ideal for flat surfaces and diameters in excess of 100 cm (40 in.)
- Automatic air removal through a watertight, air permeable membrane
- No sharps, no needles! Safe, flexible dispensing tip mates with PosiPatch
- Comparable price to latex patches
- Reusable patent-pending PosiPatch saves time and money
- Easy-to-use in any orientation

Specifications

Test Area	1250 mm ²
Test Volume	2.5 – 3 ml
Patch Diameter	44.4 mm (1.75 in.)
Magnetic Ring Diameter	66.9 mm (2.6 in.)
Background Contamination	< 3 mg/m ²

Innovative...

PosiPatch attaches to steel surfaces using a unique magnetic ring



PosiPatch[™] Advantage...

Magnetic ring
–no adhesive
residue to clean

Reusable
PosiPatch
saves time
and money

Automatic air
removal through
a watertight,
air permeable
membrane

No sharps!
Safe, flexible
dispensing tip

DeFelsko Patch

Self-adhesive, polyurethane patches

- For measuring salt contamination in accordance with ISO 8502-6,9
- Low-tack adhesive for easy patch removal with no residue to clean
- Works on nearly any material or surface geometry
- Latex-free
- Lower cost than latex patch
- Easy-to-use in any orientation



Specifications

Test Area	1250 mm ²
Test Volume	2 – 3 ml
Dimensions	50 mm x 50 mm (1.97 in. x 1.97 in)
Background Contamination	< 5 mg/m ²

Latex Patch

ISO 8502-6 conforming latex patch with easy-open tabs and low-tack adhesive for easy removal



Specifications

Test Area	1250 mm ²
Test Volume	2 – 15 ml
Dimensions	52 mm x 52 mm (2.05 in. x 2.05 in)
Background Contamination	< 5 mg/m ²

Ordering Guide	Gage/Probe Only	Kit P: PosiPatch Kit	Kit D: DeFelsko Adhesive Patch Kit	Kit L: Latex Adhesive Patch Kit
Probe Only ¹	PRBSST	SSTKITP	SSTKITD	SSTKITL
Standard Body + Probe ²	SST1	SSTKITP1	SSTKITD1	SSTKITL1
Advanced Body + Probe ²	SST3	SSTKITP3	SSTKITD3	SSTKITL3
Inclusions	Nylon carrying case with shoulder strap (SST1 and SST3 only)	- PosiPatch (5) - Magnetic Ring - Syringe and Plastic Tip(2) 500 ml DI Water - Cup (5) - Hard-shell Carrying Case	- DeFelsko Adhesive Patch (25) - Syringe and Needle (2) 500 ml DI Water - Cup (5) - Hard-shell Carrying Case	- Latex Adhesive Patch (25) - Syringe and Needle (2) 500 ml DI Water - Cup (5) - Hard-shell Carrying Case
	¹ PosiTector SST Probe Only models come complete with: certified conductivity standard, foam swabs (5), Long Form Certificate of Calibration traceable to NIST, instructions, PosiSoft Software, two (2) year warranty. ² PosiTector SST Standard/Advanced Body + Probe models come complete with: protective rubber holster, certified conductivity standard, foam swabs (5), Long Form Certificate of Calibration traceable to NIST, belt clip, wrist strap, 3 AAA alkaline batteries, instructions, protective lens shield, USB cable, PosiSoft Software, two (2) year warranty.			

PosiTector SSTKITP1 shown



PosiTector SST Specifications

Range	0 – 500 $\mu\text{S/cm}$, 0 – 2000 mg/m^2 , 0.0 – 200.0 $\mu\text{g/cm}^2$
Resolution	1 $\mu\text{S/cm}^*$, 1 mg/m^2 , 0.1 $\mu\text{g/cm}^2$
Accuracy	+/- 2 $\mu\text{S/cm}$ (0 – 200 $\mu\text{S/cm}$) +/- 10 $\mu\text{S/cm}$ (201 – 500 $\mu\text{S/cm}$)
Temperature Range	0 – 50° C (32 – 122° F)
Normalization Temperature	25° C (77° F)
Test Cell Volume	1 ml

* Hi Res Mode 0.1 $\mu\text{S/cm}$ (0 – 200 $\mu\text{S/cm}$)

SIZE: 165 x 61 x 28 mm (6.5" x 2.4" x 1.1")

WEIGHT: 140 g (4.9 oz.) without batteries

PosiPatch Starter Kit (SSTKITPATCHP)

For use with existing conductivity meters.

Try the revolutionary, reusable PosiPatch with a low cost trial pack.

Includes: PosiPatch (5) syringes (2) dispensing tips (2) and magnetic ring.



Replacement Patches

PosiPatch (5 pack)	SSTPATCHP5
PosiPatch (24 pack)	SSTPATCHP24
Magnetic Ring for PosiPatch	SSTRING
DeFelsko Adhesive Patch + needle (25 pack)	SSTPATCHD25
Latex Adhesive Patch + needle (25 pack)	SSTPATCHL25

Consumables

Plastic Dispensing Tips (10 pack) — for use with the PosiPatch

Needles (10 pack) — for use with adhesive patches

3 ml syringes (10 pack) — for use with dispensing tips and/or needles

30 ml Cups (10 pack) — sterile, single-use cups ensure measurement accuracy

Certified Conductivity Standard (60 ml, 2 oz.) — to verify probe accuracy

Deionized Water (240 ml, 8 oz.) — purified, ion-free water

Foam Swabs (5 pack) — for cleaning the probe's test cell

Conforms to ISO 8502-6/8502-9, US Navy NSI 009-32, US Navy PPI 63101-000, AS 3894.6, IMO MSC.215(82), IMO MSC.244(83), SSPC Guide 15, ISO 11127-6, ASTM D4940